

0036-485 Padlocking Hasp with Quarter Turn Inside Release

Part Number: 10036485*

⚠ CAUTION

- To protect against human entrapment periodically check function of inside release assembly


DIRECTIONS

- Start installation by drilling a $\text{Ø}3/8"$ hole through the jamb.
- Enlarge the hole on the exterior of the jamb by using a $\text{Ø}3/4"$ drill, or hole saw, to a depth of $1/2"$. Enlarge the interior hole to $7/8"$ and $2"$ deep.
- Verify the alignment of the interior and exterior parts. Mark, drill, and attach mounting plate and 485 assembly (spacers as needed) using #10 fasteners (not supplied).
- From the exterior, slide the post through the Locking Bar and mounting plate on the jamb.
- Tighten the 0485 assembly until the post is held tightly against the mounting plate.
- Check function. Install padlock with locking bar across the door. Rotate the inside lever to unlock, then PUSH door open from the inside. Door must open while padlock is in place.
- Re-attach all parts after test, filling exterior (warm side) hole with low temperature lube to prevent air flow.
- Install glow-in-the-dark instruction label. Place safe guard label.


Note: It is recommended to have reinforcing plates within the door jamb at the mounting location.

*Part No.	Description	Offset
10036485240	Quarter Turn ISR, 4" Wall Thickness	Flush (0.0 mm)
10036485340	Dual Post w/ Quarter Turn ISR, 4" Wall Thickness	Flush (0.0 mm)
10036485640	Quarter Turn ISR, 4" Wall Thickness	1-1/8" (28.6 mm)
10036485840	Quarter Turn ISR, 4" Wall Thickness	1-3/8" (34.9 mm)


Note: [Click Here to view 0036-485-340 Instruction Sheet](#)

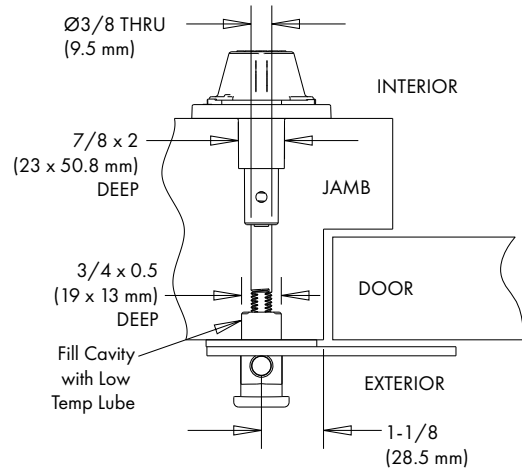

FLUSH HASP

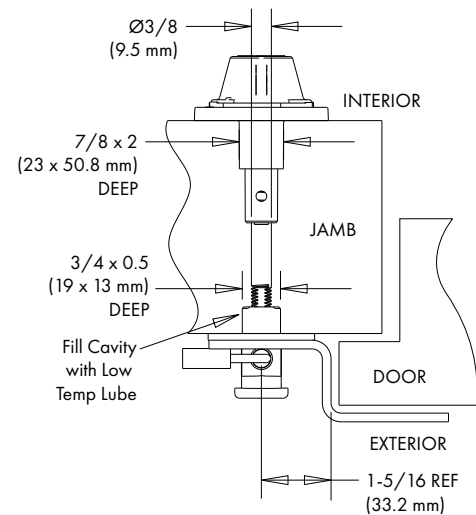

OFFSET HASP

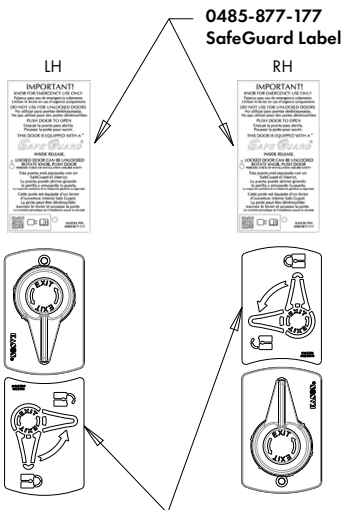

0485-879-117 Instruction Label (Glow-in-the-Dark)
Remove protective backing and adhere label to clean panel surface.
NOTE: Designed for use with a 5/16" diameter shank padlock.

