

0036 Padlocking Hasp with Twist-Off Inside Release




Part Number: 10036*

⚠ CAUTION

To protect against human entrapment periodically check function of inside release assembly.

DIRECTIONS

1. It is recommended to have reinforcing plates within the door jamb at the mounting location.
2. Start installation by drilling a 3/8" diameter hole, located as shown above, through the jamb.
3. Enlarge the hole on the exterior of the jamb by using a 3/4" drill, or hole saw, to a depth of 1/2".
4. Insert the 0036-702-54 post through the 0036-315-95 mounting plate. Locate on the exterior of the jamb, centered in the hole, oriented so the padlock hole is vertical.
5. Mark, drill, and tap the two mounting holes for #10 screws and fasten to the jamb.
6. From the inside, insert the 1334 inside release assembly into the hole. Slide the post through the offset locking bar and insert it into the mounting plate on the jamb.
7. Tighten the inside release assembly until the post is held tightly against the mounting plate.
8. Check function. Install padlock with locking bar across the door. Twist-off the inside knob to unlock, then PUSH door open from the inside. Door must open while padlock is in place.
9. Re-attach all parts after test, filling exterior (warm side) hole with low temperature lube to prevent air flow.
10. Install glow-in-the-dark instruction label.
Place SafeGuard® label.

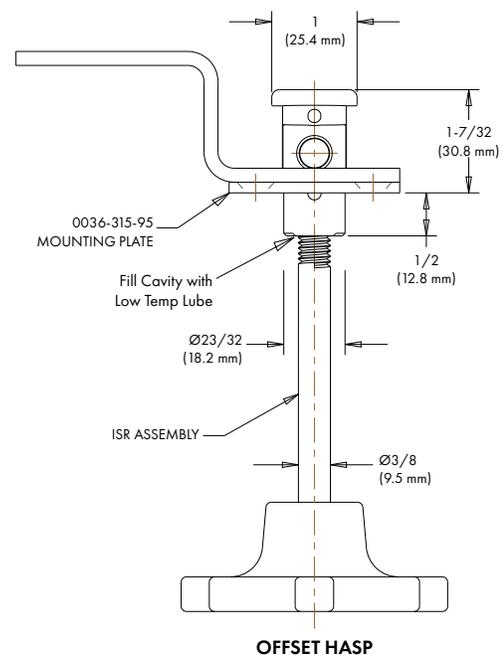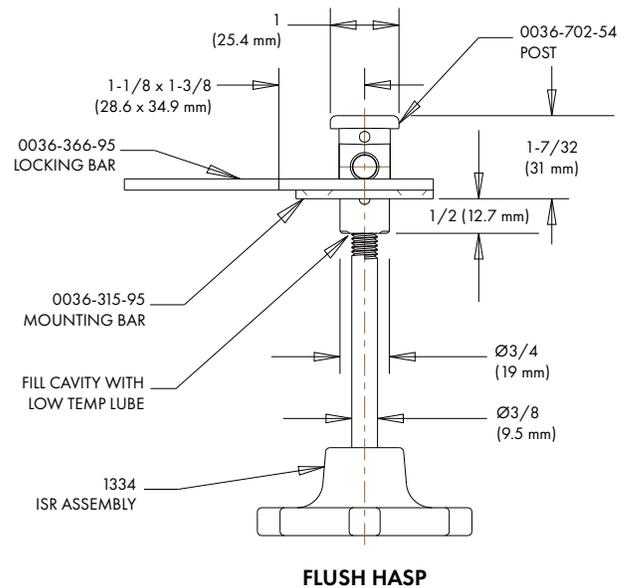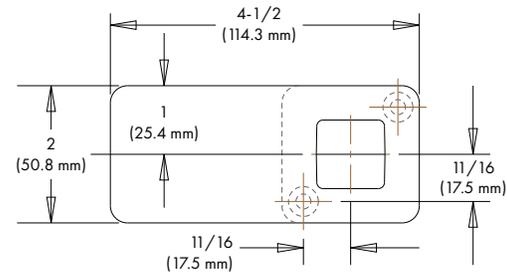

* Part No.	Description	Offset
10036000002	Twist-off ISR, 4" Wall Thickness	Flush (0.0 mm)
10036000002045	Twist-off ISR, 4-1/2" Wall Thickness	Flush (0.0 mm)
10036000006	Twist-off ISR, 4" Wall Thickness	1-1/8" (28.6 mm)
10036000006045	Twist-off ISR, 4-1/2" Wall Thickness	1-1/8" (28.6 mm)
10036000008	Twist-off ISR, 4" Wall Thickness	1-3/8" (34.9 mm)
10036000010	Twist-off ISR, 4" Wall Thickness	1-5/8" (41.3 mm)
10036000012	Knob with Threaded Rod 11-1/4" Long	NA